


# Cedar Impressions

## Repairing a Damaged Cedar Impressions Panel with the Repair Clip

### Tools Needed

Cam Clips, Pull Tabs and Aluminum Rivets are included in the **Cedar Impression Repair Kit**

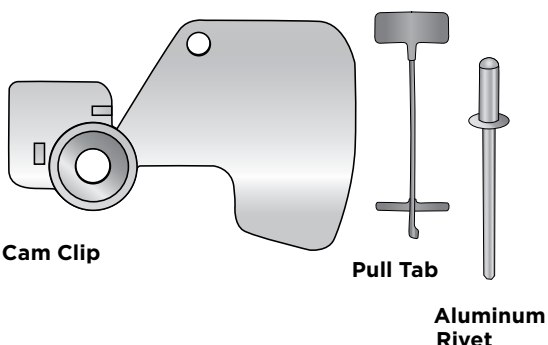


### You will also need


- Rivet Tool
- Hammer
- Utility Knife
- Chisel
- “Wonder Bar” or “Roof Snake Bar”

### Removing the Damaged Panel


Cut a large rectangle out of the damaged panel. Cut or chisel through the sides of the panel and remove the lower half.

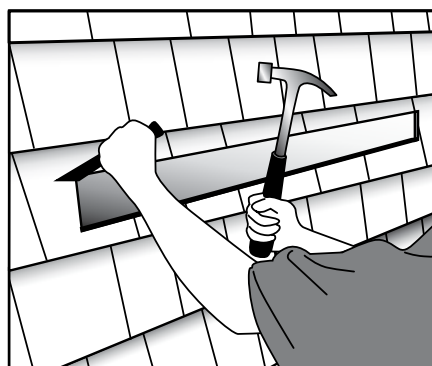

Pry the nails out of the nail hem of the damaged panel.

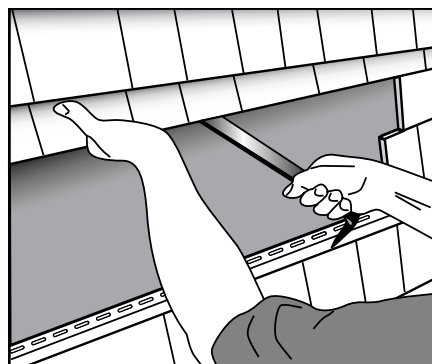



Push up on the panel to unlock it, and then pull down to remove the damaged panel.

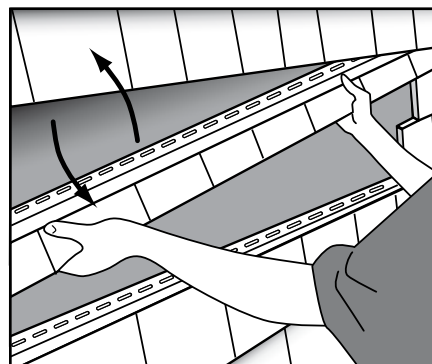

## Preparing the New Panel

Cut off the entire top locking tab.

From the back, insert a metal rivet into the middle of one of the specified nail slots, then place a cam clip over the rivet. Utilize the rivet tool to tighten the metal rivet until it is tight, and the tail is removed by the tool. Repeat this process for the remaining 5 clip locations.

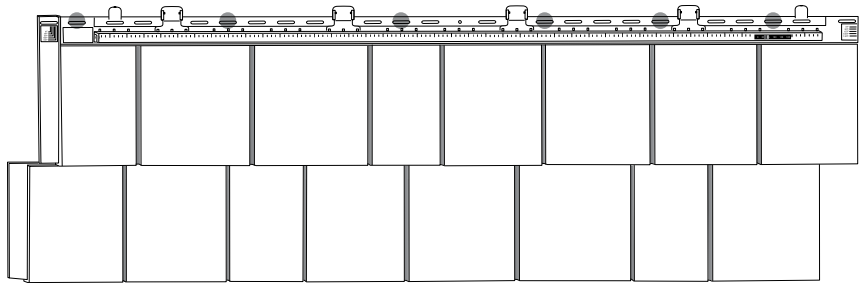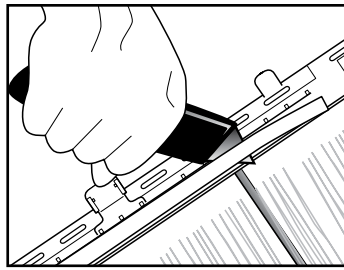

## Installing the New Panel

Slide the left side of the new panel into the side locking tabs. To engage the right-side tabs into the existing panel, flex the panel out from the center. As you raise the new panel into position, make sure the bottom lip of the panel engages the locking tab on the panel below.

Lift the panel above the replacement panel far enough to place the new nails into the old nail holes.

Using your wonder bar or roof snake, drive the nails in by placing the bar on the nail head and hitting the bar with a hammer.

While applying pressure to the top panel, pull down large end of the cam cords. Make sure each cam clip engages the lip of the panel above it. Keep pulling down on the cam cords until they break off.

